


Instruction Manual

 
Keyboard Controller



Please read this manual thoroughly before use, and keep it handy for future reference.

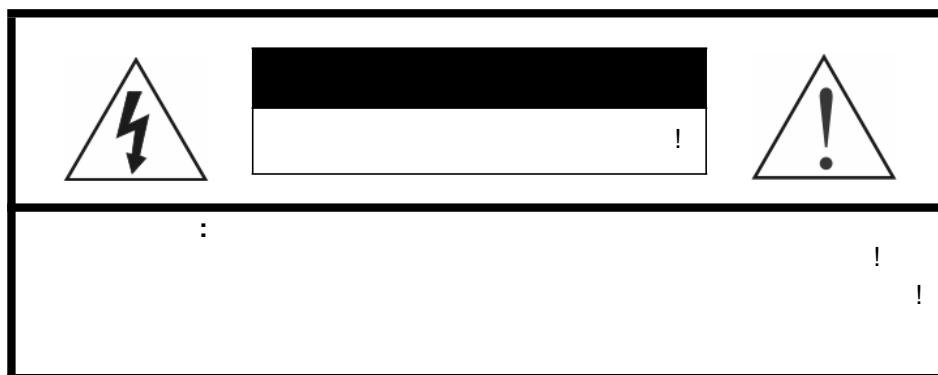


Этот значек обозначает важное место в инструкции. Стоит внимательно прочитать содержимое рядом с этим знаком.



ВАЖНЫЕ ЗАМЕЧАНИЯ

1. .
2. .
3. .
4. .
5. .
6. .
7. .
8. .
9. .
10. .
11. ,
12. ,
13. 2

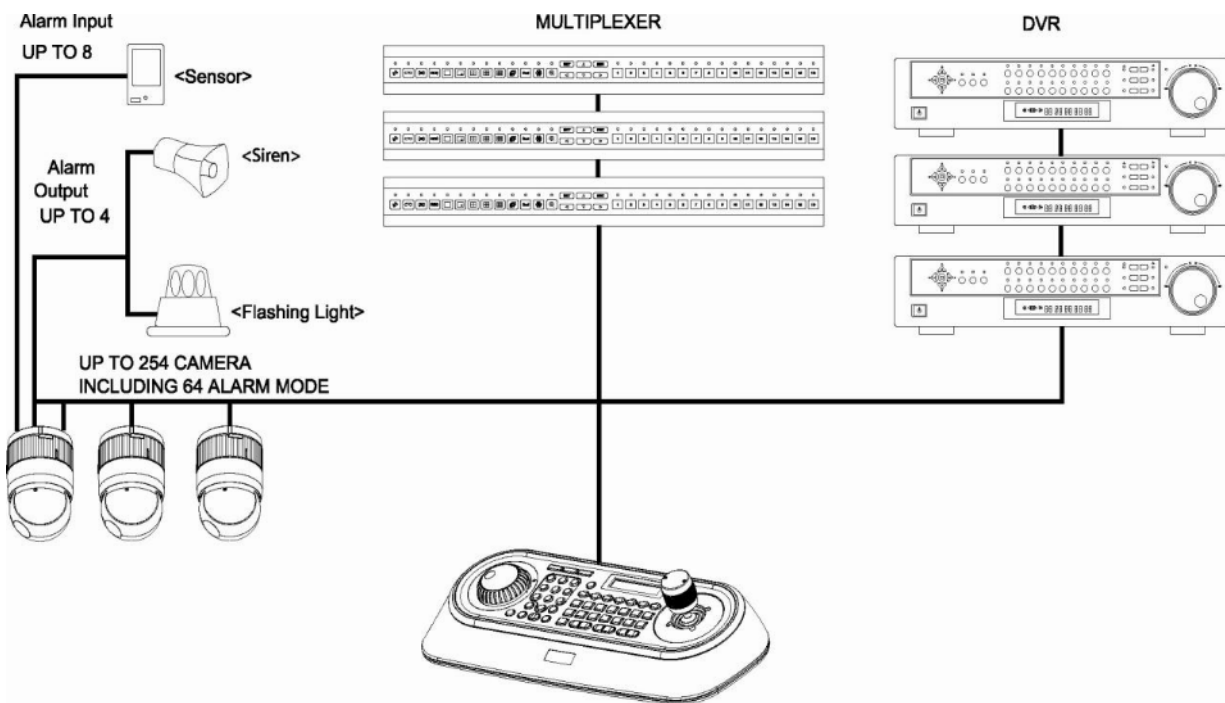



,

:


.


	1
	1
12	1
	1

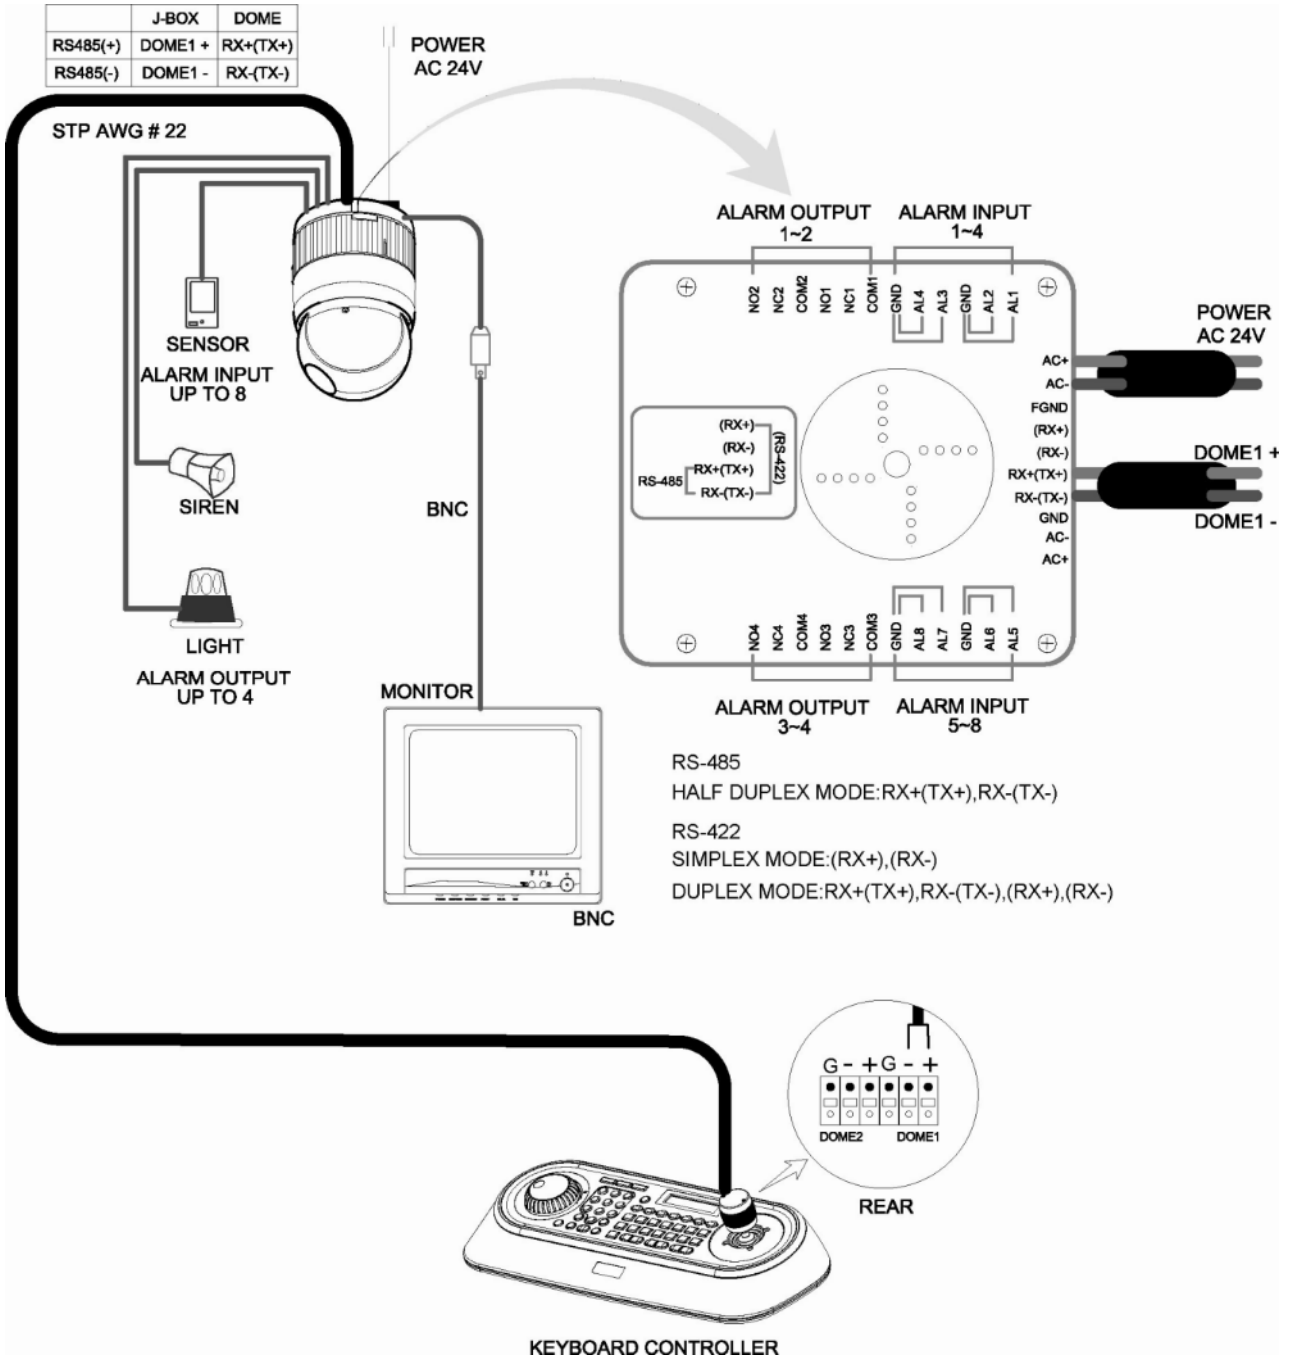


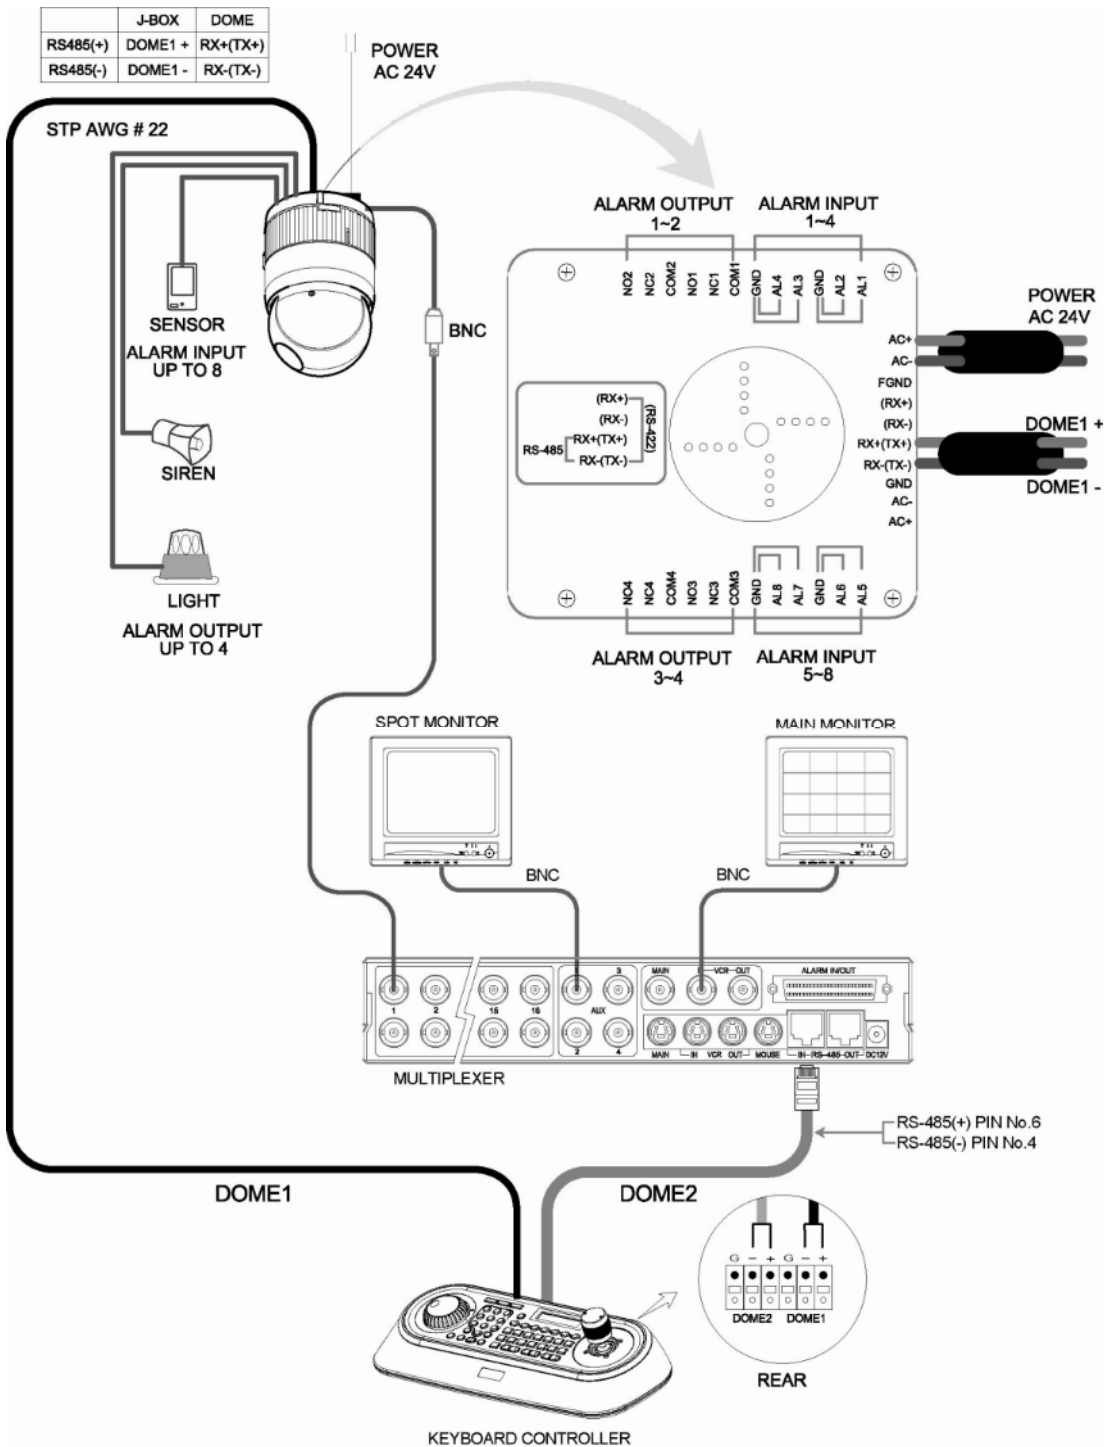

	J-BOX	DOME
RS485(+)	DOME1 +	RX+(TX+)
RS485(-)	DOME1 -	RX-(TX-)

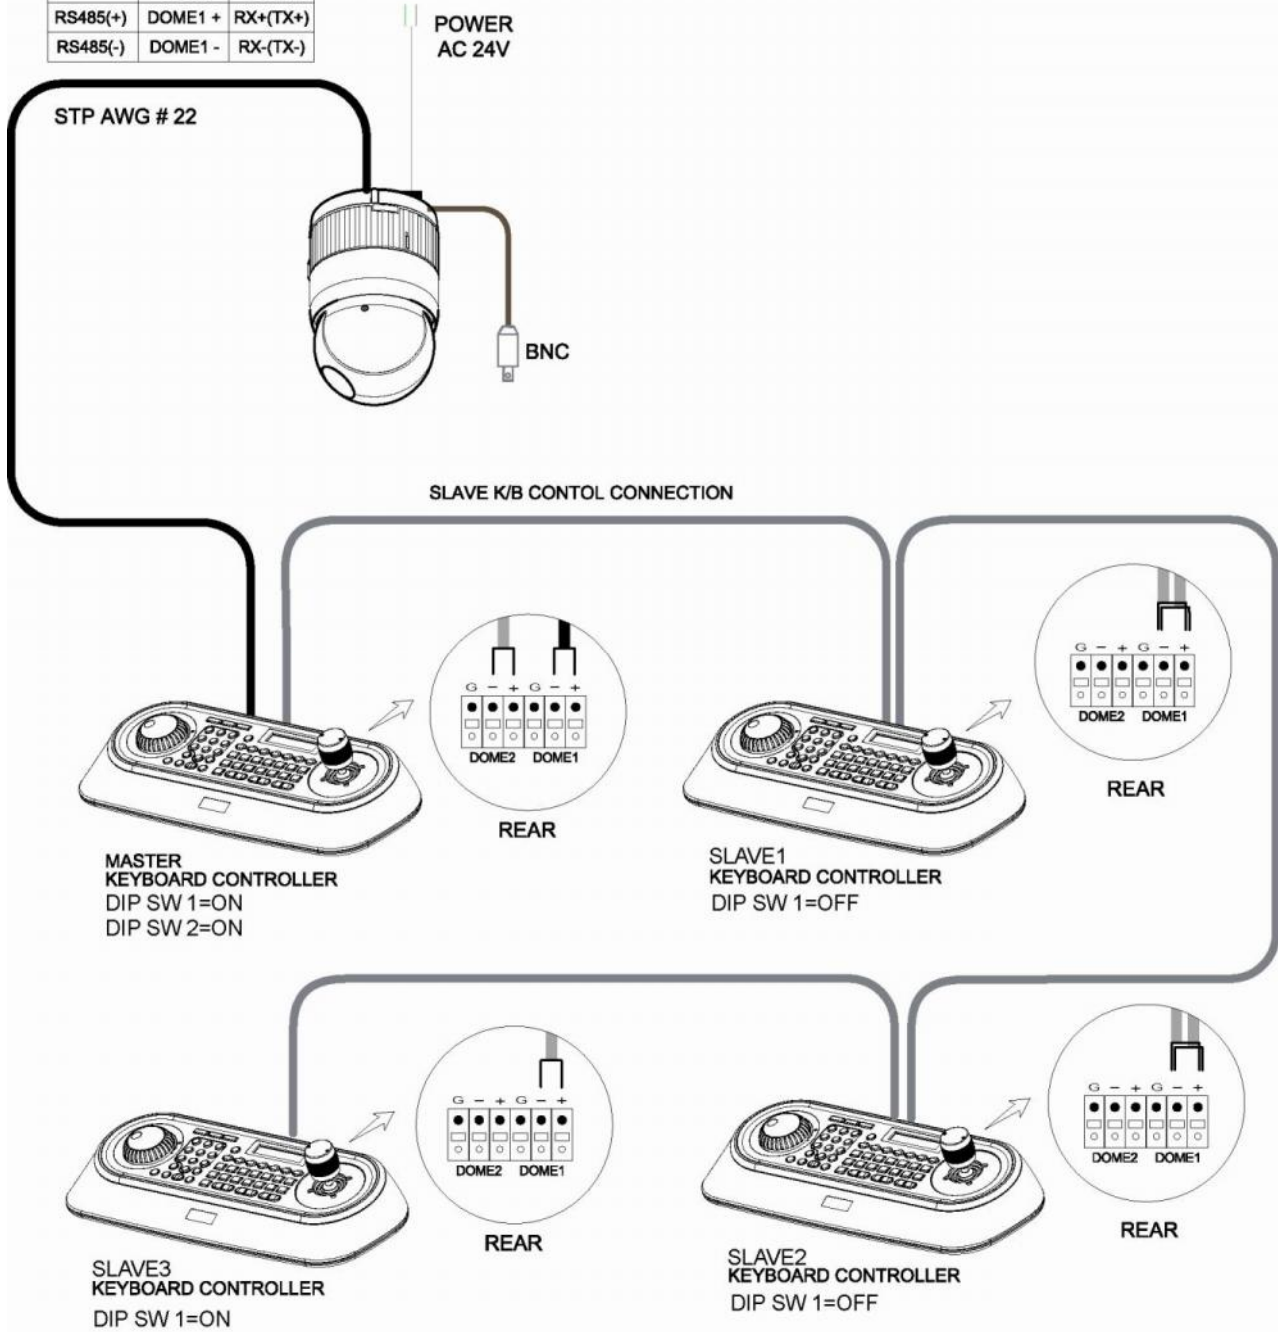

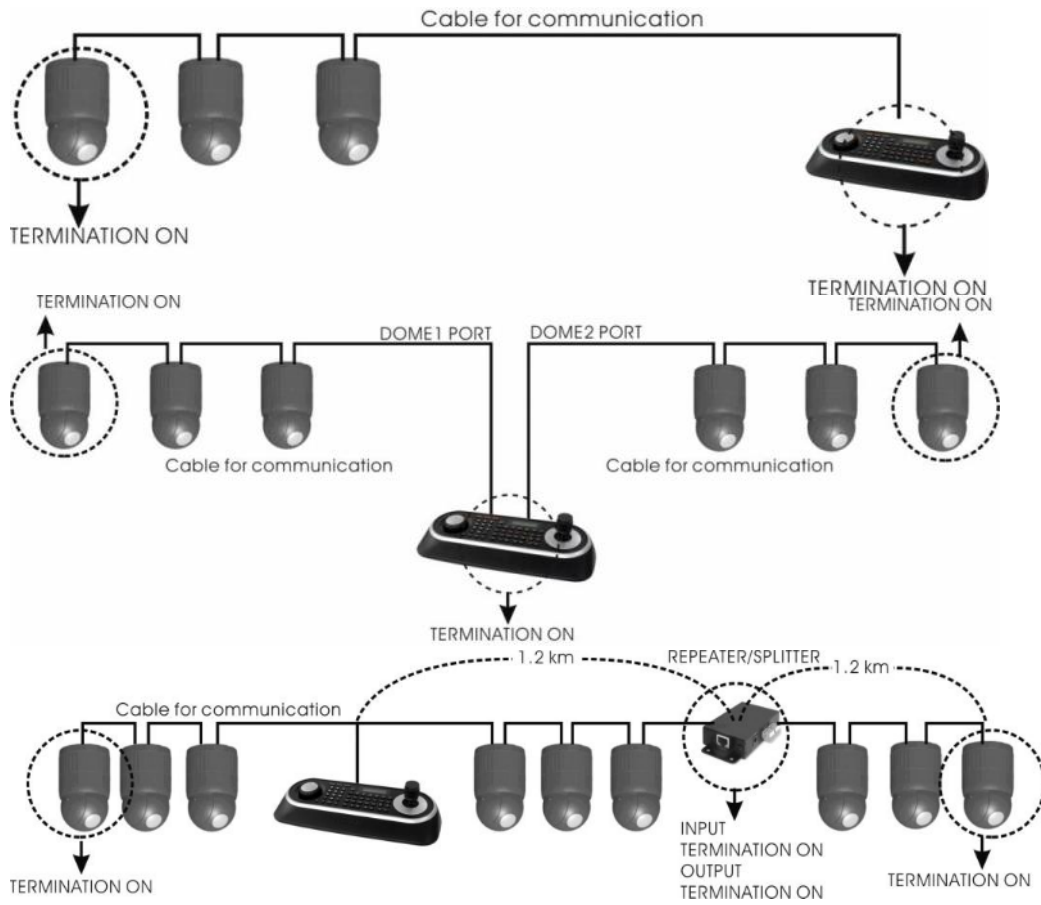

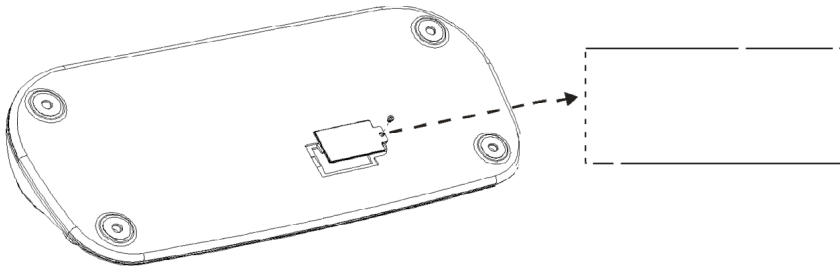

NO	SETTING	DESCRIPTION
1	ON	DOME1 Termination
	OFF	
2	ON	DOME2 Termination
	OFF	
3	ON	J-BOX Data2 Termination
	OFF	
4~6	OFF	Reserved
7	ON	DOWNLOAD ON
	OFF	DOWNLOAD OFF
8	ON	SLAVE
	OFF	MASTER

CTRL + MENU

MAIN MENU

- 1.Configuration
 - 2.Network
 - 3.camera
 - 4.Time/Date
 - 5.Alarm
 - 6.LCD
 - 7.Data Bank
 - 8.Initialization
 - 9.Hold time:005s
- Save and Exit

- Key Beep : ON -
OFF -
- Key-Lock : OFF~60Min - « »
OFF - « »

S-Range :32

- Chg User Pin -

CurrentPin :

NewPin :

ConfirmPin :

- Chg Admin Pin -

CurrentPin :

NewPin :

ConfirmPin :

: «9999»

«1111».

- Rescan Domes

- Save and Exit

Network

1. J-BOX Set: OFF	J-Box ()
2. Set Port	
3. MUX Config	MUX.
4. Set Slave KBD	
Save and exit	

Set Port

Set Baud Rate

Set Baud Rate	
1.DOME1	: 9600
2.DOME2	: 9600
3.RS232	: 9600
Save and Exit	

Com Ports

Com Ports	
1.DOME1	: DOME
2.DOME2	: NONE
3.RS232	: NONE
Save and Exit	

J-BOX :OFF		
DOME1	2400~38400	None/Dome/DVR5
DOME2	2400~38400	None/Dome/DVR1-5/PC-DVR/ KBDDUP/KBDTRI/AUX IN
RS232	2400~38400	None/DVR1-5/PC-DVR/AUX IN
J-BOX :ON		
DOME1	2400~38400	RS485 :None/Dome
D2/DVR	2400~38400	RS485 :None/Dome/DVR1-5/PC DVR/AUX IN
ALARMPC	2400~38400	RS232 :None/AUX IN
MUX/KBD	2400~38400	RS485 :None/DUPLEX/TRIPLE /AUX IN
DVR/AUX	2400~38400	RS232 :None/DVR1-5/PC-DVR/AUX IN

Set Slave Kbd

Set Slave Kbd

1. Slave KBD : OFF
2. MUX cont : OFF
3. DVR cont : OFF
4. Dome Menu : OFF
5. Slave KBD Unit

Save and Exit

1. Slave KBD	.
2. MUX control	ON: . MUX
3. DVR control	ON: . DVR
4. Dome Menu	ON: . Dome
5. Slave KBD Unit	
Save and exit	

Cam<-	PR	PT	BR
0001	F2E	D1	9600

Cam : ID
PR : [F2,F2E,P-D(PELCO-D),P-P(PELCO-P)]
PT : Port[D1(DOME1),D2(DOME2)]
BR :

/

TIME/DATE	
1.Dispaly	:ON
2.Year	:2007
3.Month	:JUL
4.Day	:02 MON
5.Hour	:12
6.Minute	:20
Save and Exit	

PIP, 2x2, 3x3, 4x4, ZOOM, SET,

3.2.1

ENTR : MACRO/MENU
 : (ENTR+Joystick)
 : Joystick ENTR ENTR+Joystick
 zoom

3.2.2

PREV NEXT : NO. + CAM, NO. + MAIN

No. 1 1 6 + CAM,

No. 1 3 1 + CAM,

CTRL + MENU :

CTRL

MENU

1 + CAM :

1

CAM

CTRL + JOYSTICK :




CTRL

Joystick

ENTER + JOYSTICK :



 
 
ENTR




 








Joystick

	0-9 + CAM	(1 + CAM, 3 + TOUR, 5 + SCAN, 6 + PRST)
	ESC	
	ALRM	
	ON	No. 1-4 + ON
	OFF	No. 1-4 + OFF
	PREV	
	NEXT	ID
	HOME	
	GLBL	(e.g., 1 2 5 5 + ENTR/GLBL). 8 8 8 + ENTR/GLBL, 9 9 9 + ENTR/GLBL
	PRST	(1, 2 ... 3 1 ... 2 4 0 + PRST)
	TOUR	TOUR (1 ~ 8 + TOUR)
	PTRN	PTRN (e.g., 1 ~ 4 + PTRN)
	SCAN	(e.g., 2 + SCAN repeats Auto Scan 2).
	MENU	CTRL+MENU
	CTRL/PGM	No. + CTRL/PGM + PRST No. + CTRL/PGM + TOUR No. + CTRL/PGM + SCAN
	CTRL/PGM	CTRL+Joystick : (Preset, Pattern, Scan, Privacy....) CTRL CTRL+Joystick : (- 380° /)
	ENTR/GLB L	ENTR+Joystick : PTZ, Mouse, Cursor
		
		
Zoom		
Joystick	Twist Up / Down Left / Right Press(Togg le)	

	No. + MAIN	
PIP	PIP	.
2 2	2X2	4
3 3	3X3	9
4 4	4X4	16
	2ND	2nd+ENTR
	L.REC	
	MACRO	
	SEL	.
« »	FRZ	« »
	ZOOM	.
	SEQ	
VCR	VCR	VCR
SET	SET	:
	AUX1 ~ 4	(2 + AUX1)
	MUX	(1 or 2 + MUX)
	ENTR+Joystick	.

DVR

DVR		DVR: 1 2 + DVR).
PTZ		 

/		/
		◀◀◀◀
		▶▶▶▶
/		
/		
		
		(DVR)
« »		« »
		
		
		
		Select a highlighted item or completes an entry that you have made.
	CTRL+ENTR+Joystick	
Jog dial	CTRL+ENTR+Zoom Handle	
	AUX1 ~ 4	
	No. + AUX1 ~ 4	

Приложения А

()

Problem	Possible Solution
	1. ID
	1. ID BNC

	1.
& DVR	1. . .

		CE EMC, FCC CLASS A	
		16 X 2	
		12	
		6 W	
		RS-485/232	
485)	(RS-	127	32
485)	(RS-	127	32
485		DVR	99
			: 3
DVR (RS-232)		DVR	
		380x168x96 (ITC-L250P)	
		452 283 162 (ITC-L400P)	
		1.2 kg (ITC-L250P)	
		1.8 kg(ITC-L250P)	
		0°C 50°C	
		0 90%	

